
Chime Movement Instructions

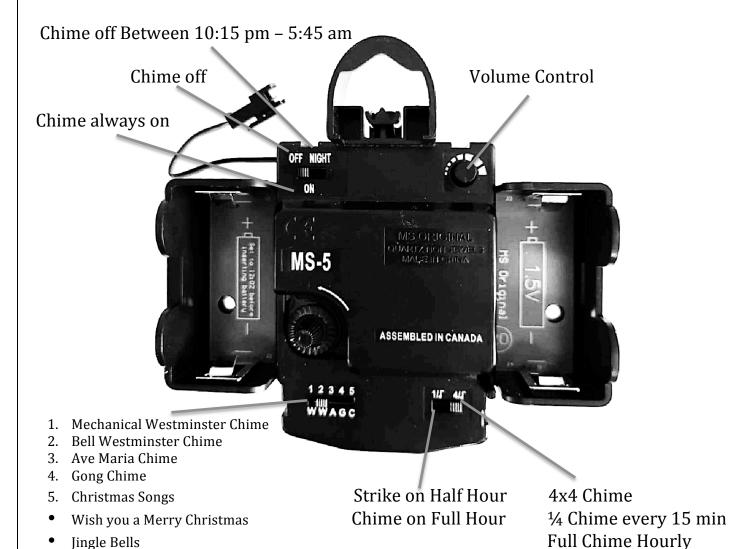

1. Set chime ON

It's the Season

- 2. Position hands to 12:02
- 3. Insert the batteries and let the clock chime 12 times.
- 4. Set the clock to your time.

Rudolph the Red Nose Reindeer

** When setting clock to NIGHT MODE if the clock still chimes after 10 pm move the time 12 hours ahead to calibrate NIGHT MODE.